

1. **Attach HCl Zinc Filter Assembly (H36) to the Vent Hose.**
2. **Position the hose to prevent condensation from accumulating inside.**
3. **Replace the filter every four months or when the pH paper indicates the acid is exiting the filter.**

