

Lid Replacement HCl/HClII

1. Use the supplied wrench to remove the four bolts securing the lid to the handle assembly.
2. Remove any shims between the lid and the handle.
3. Align the new lid. (Shims are no longer needed)
4. Tighten the screws.
5. The HCl is ready for use.

