


## Water Filter Replacement

### X97

HCI/HCI, XT10/XT10I and XT15/XT15I

1. The water inlet filter is located on water supply line.
2. Unscrew the filter from the HCI.
3. Unscrew the filter clamp from the water supply line.
4. Replace the filter assembly.
5. Re-connect the fittings. Turn on the water and check for leaks.

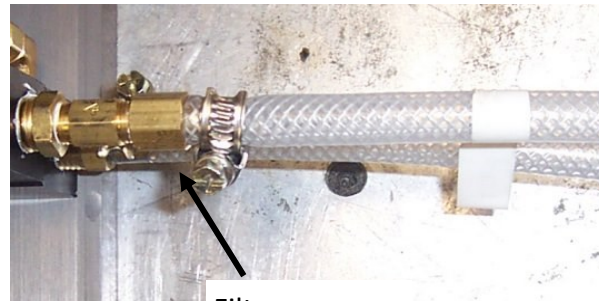

Filter  
Assembly

