



This Service Procedure details the replacement of the Temperature Controller (Part #: A11)

1. Remove the old Temperature Controller by gripping the edges of the controller and pulling toward you. Set aside.

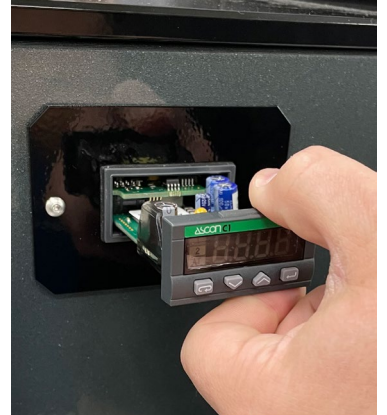

2. Select the new Temperature Controller (Part #: A11) for installation. Pull the controller interface toward you to remove the controller from its casing. Set casing aside.

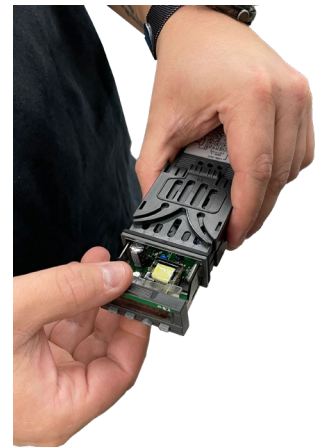

3. Insert the new Temperature Controller into the DELTA slot. Push in until it is firmly in place.  
Dispose of old Temperature Controller according to lab SOPs.

