

## Fuse Replacement A2000/A2000I



### **Fuse Replacement:**

1. Use a flat blade screwdriver to twist the slot on the fuse holder counterclockwise 1/4 turn to open. Check both fuses.
2. Pull out the grey fuse cap and replace the fuse .  
120V– 15 amp  
220V– 10 amp