


# Replacing Pressure Sensor Assembly (DELTA17) DELTA/DELTAI

1. Remove the ten nuts holding the clear rear panel in place and set the panel aside.




2. Locate the two DELTA17 pressure sensor assemblies.

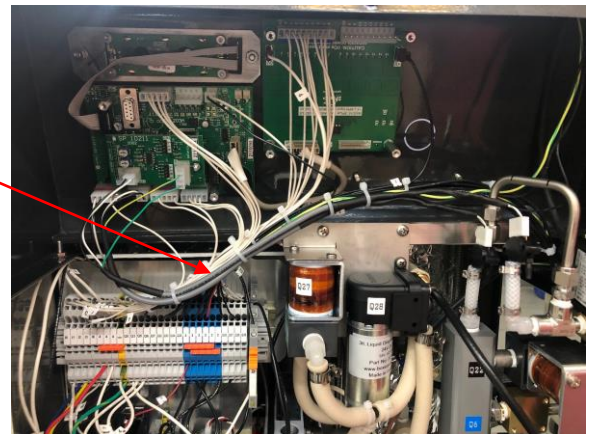


3. Cut the zip ties holding the DELTA17's in place and isolate the one that needs replacing.

Carefully  
cut zip ties


DELTA17

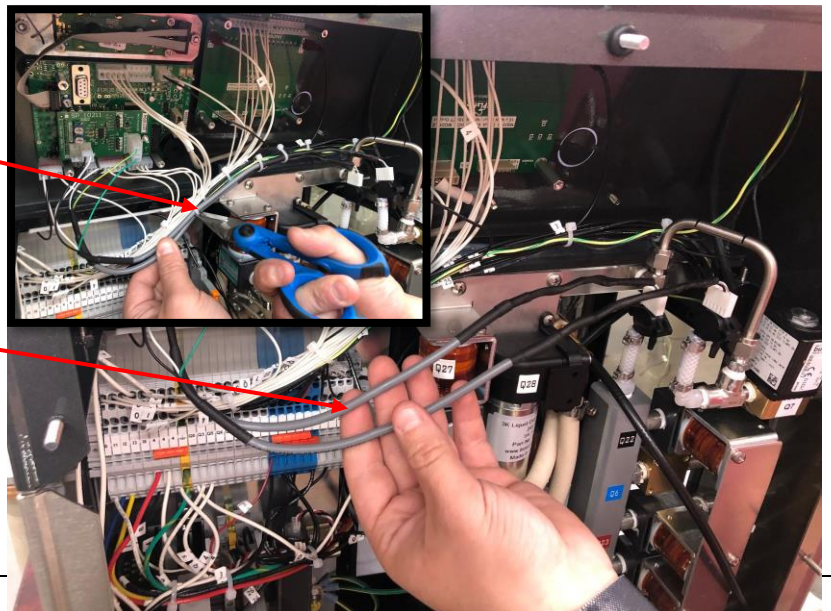

4. Locate the correct two-position connector (green, white, and black wires) from the Splat board and unplug.

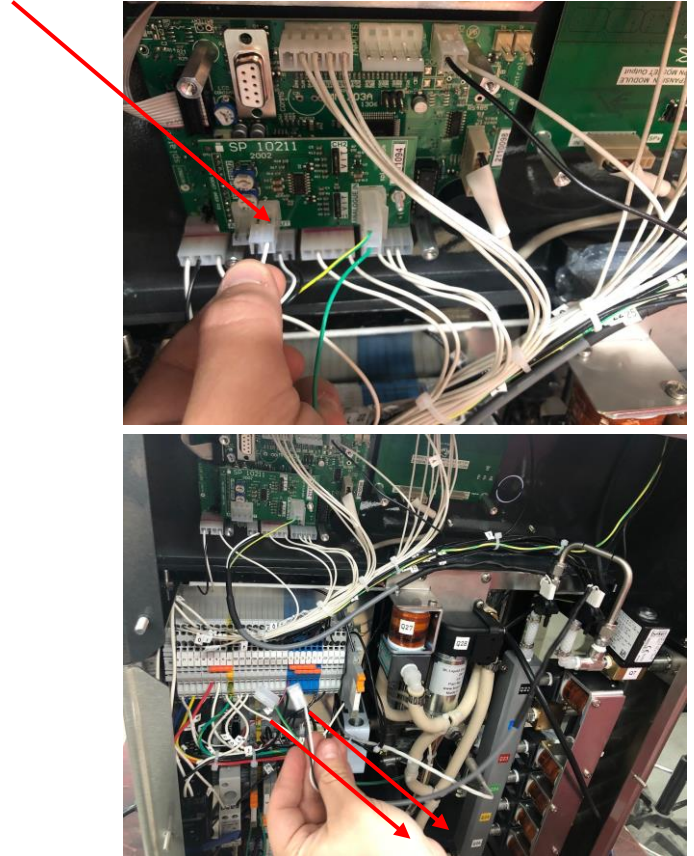

5. Remove the six-position connector from the pressure sensor and tube end. Then, begin to install the new DELTA17 by first replacing the tube and pressure sensor end.

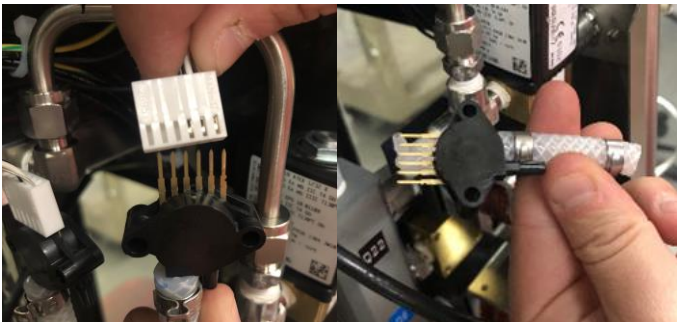



## Replacing Pressure Sensor Assembly (DELTA17) DELTA/DELTAI

6. When replacing the six-position connector to the pressure sensor end of the new DELTA17, make sure to install it with the correct orientation (see picture to the right).

DELTA17 will already come connected to the pressure sensor for ease of installation.

Now plug in the two-position green and white/black wire connectors to the Splat board.

