
Controller Installation D200/D200I






4. Remove the controller from the plate by spreading the retaining clips apart (spread the clips on both sides) and pulling the controller out of the front of the plate.



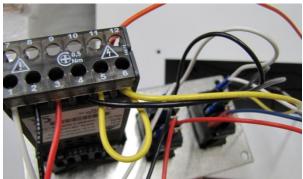

- 1. Unplug the power cord from the machine.
- 2. Use a Phillips head screwdriver to remove the four screws that secure the controller and switch plate to the front of the Daisy.
- 3. Pull the panel away from the cabinet and unplug the grey terminal block from the controller back.

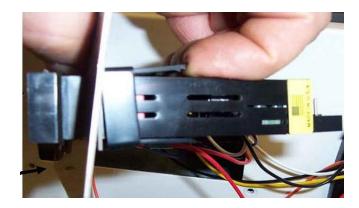

- 5. Slide the new controller through the faceplate. Snap the two retaining clips around the controller body to secure it in place. Attach the controller plug to the controller.
- 6. Follow the wiring diagram and wire the plug as shown. Re-install the faceplate. The Daisy is ready for use.

Controller Installation D200/D200I

