



Replace all four of the column top O-rings.

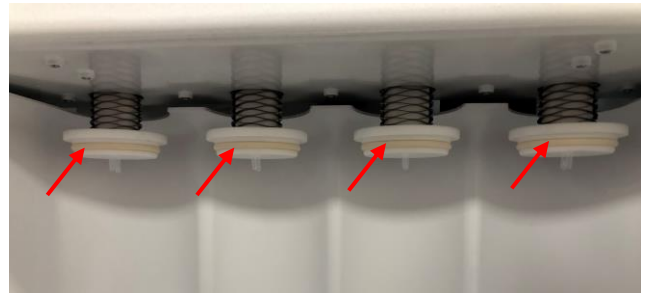

1. Squeeze the O-ring until it is separated from the column top and pull the O-ring off.

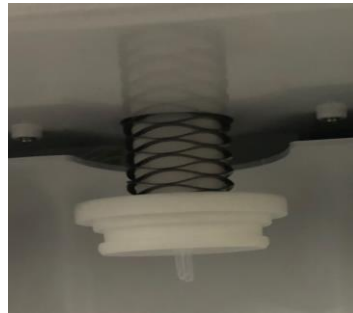

2. Install new O-rings by placing them into the column top groove. Make sure that they are not loose. O-Rings should not spin freely inside groove.

