		Replacing Reservoir Filter FLEX	Service Procedure O3 Revised: 08/08/2022
While wearin	g gloves, replace all four		
1. Ope	n the reservoir door.		
2. Uns bea	crew one of the reservoi	r caps and place into a	
3. Rins	e the tube and filter usin	ng distilled water.	



Replacing Reservoir Filter

FLEX

Service Procedure 035

Revised: 08/08/2022

4. Dry the tube and container filter.

5. Hold the larger diameter tube at the end of the dip tube and pull the container filter out.





Replacing Reservoir Filter

FLEX

Service Procedure **035**

Revised: 08/08/2022

6. Take the new container filter and insert it into the end of the tube. Push firmly until the barb is completely inside.

