


## Water and Vent Valve Service A2000/A2000I




Vent Valve (Q7)

Water Valve (Q6)

1. View from the rear of A2000

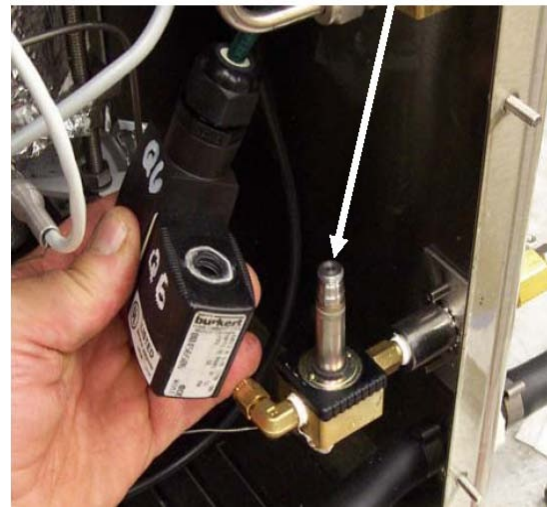


2. Remove the nut on top of the valve and remove the valve coil.

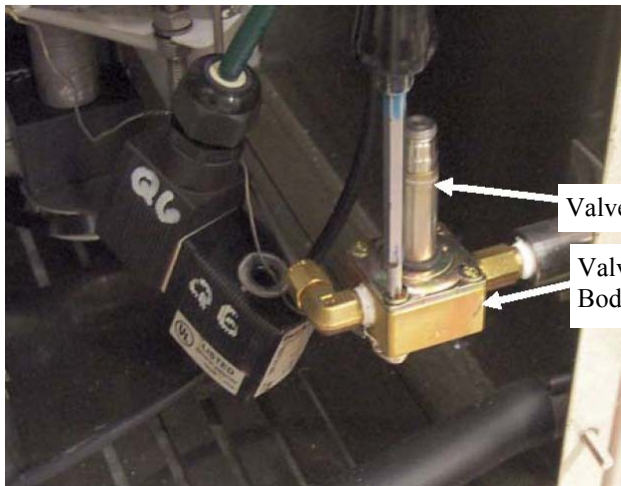

3. Remove the black plastic cover on the valve and use a small flat bladed screwdriver to remove the four screws connecting the valve stem to the valve body.

Note: There is a spring inside the valve stem. Remove the valve stem slowly and carefully.

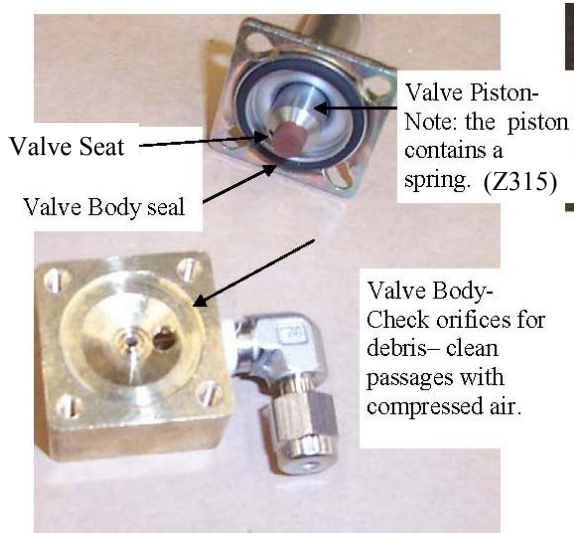

4. Shown is the valve piston, valve body, and valve seals.

5. Check the valve body for debris and corrosion.

6. Check the valve seals for swelling and tears. The valve seat seal is attached by a flange and peels off the piston. Replace both seals if exposed to acetone or damaged.